



Step-by-Step Guide to Installing and Using the Forklift Wrecker

A Mechanical Auto-Load Wheel Lift Attachment
to Help You Do Your Business Faster.

INSTALLING AND USING THE FORKLIFT WRECKER

The Forklift Wrecker is an efficient, affordable solution for vehicle impound lots, body shops, and service garages. Offering you the ability to easily pick up and move vehicles without searching through keys, jumping dead batteries, or calling a wrecker, the Forklift Wrecker is a mechanical auto-load wheel lift attachment that helps you do your business, faster.

If you're planning to invest in a Forklift Wrecker from Minute Man Wheel Lifts, you probably want to know how to install and use this product on your site. That's where this guide comes in. We're going to walk you step-by-step through the installation and use of our Forklift Wrecker. And if you run into any questions along the way, don't hesitate to give our team a call at (877) 593-6959. For now, let's get started.

GUIDEBOOK OUTLINE

- 01. FORKLIFT WRECKER REQUIREMENTS**
- 02. HOW TO INSTALL THE FORKLIFT WRECKER**
- 03. HOW TO USE THE FORKLIFT WRECKER**
- 04. CONTACT US**

NOTE: Following this information will allow you to easily install and use your mechanical auto-load Forklift Wrecker wheel lift attachment by Minute Man Wheel lifts.



01. FORKLIFT WRECKER REQUIREMENTS

Before we get to the Forklift Wrecker's installation instructions, it's important that you have the right equipment on-site for the product.

To use the Forklift Wrecker, you'll need:

- A forklift with at least 5,000 lb lift capacity
- A complete understanding of OSHA requirements for forklift attachments. It is your responsibility to ensure you're only using Forklift Wrecker equipment in accordance with OSHA regulations.



With the right forklift on-site and a good understanding of how and how not to use this new equipment, you're ready to get started.

On the next page, you'll learn how to install the Forklift Wrecker.

02. HOW TO INSTALL THE FORKLIFT WRECKER

When the Forklift Wrecker arrives at your facility, it will be carefully packaged on a pallet with all of the parts you need for assembly.

Start by unpackaging the pallet's contents, and make sure all of the following components are included:




Visual of Forklift Wrecker packed pallet

- Main frame/boom
- Fork lock bolts (chain hooks are installed in back pocket)
- T-bar with pivot pin and self-centering springs already installed
- 2 C-hooks, one with clamp spring installed
- 2 C-hook bolts, 1" x 3 1/2"
- 2 Spring lock washers
- 4 C-hook disc washers
- 2 Ratchet straps

Once you have all parts accounted for, pull up your forklift and get started on the installation!

INSTRUCTIONS:

1. Lift the main frame/boom using your forklift.
2. Secure the lock bolts to the forks of the forklift.
3. Place a C-hook into the end pocket of the T-bar. The C-hook chain grab hook should face the forklift side of the T-bar.
4. Place one disc washer under the C-hook, and one disc washer above the C-hook.
5. Secure the C-hook in the T-bar with a C-hook bolt and spring lock washer. Ensure disc washers are lined up properly.

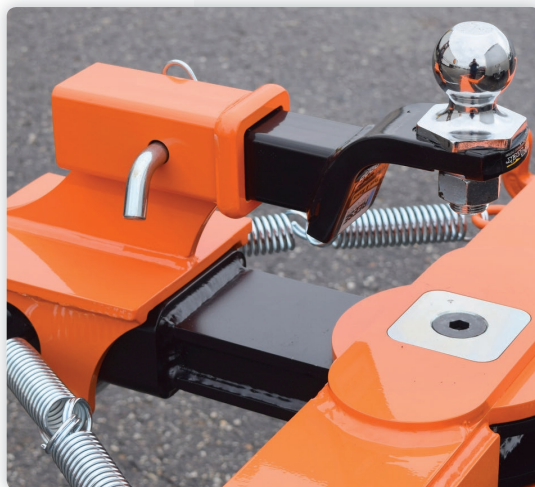

Instructions continued on next page

INSTRUCTIONS CONTINUED:

7. Hold C-hook in place and apply several drops of high-strength thread locker to the first few bolt threads.
8. Tighten the bolt until the C-hook is snug. Now back the bolt up slightly, just until the C-hook can rotate.
9. Open the quick link attached to the end of the clamp spring.
10. Attach the link to the opposite C-hook spring loop. Tighten the coupling nut on the quick link.
11. Repeat on other C-hook.

**03. HOW TO USE THE FORKLIFT WRECKER**

The Forklift Wrecker is an efficient, simple-to-use wheel lift that fits into nearly any space on your vehicle impound or storage lot. Once you get the hang of the Forklift Wrecker, you'll be happy to forgo those expensive wrecker fees for this handy machine. Here's how to use your Forklift Wrecker for the first time.



1. Position your forklift square in front of the vehicle ready to be towed.
2. Push the attachment under the wheels of the vehicle.
3. C-hooks will pivot around the wheels.
4. Lift the vehicle with the forklift.
5. Secure lifted wheels with provided ratchet straps.
6. Get your Forklift Wrecker moving. Maneuver the vehicle to its desired location.
7. Gently lower vehicle with forklift
8. Remove ratchet straps
9. Pull attachment out from under the wheels.
10. You're on to the next job!

04. CONTACT US

Easy to install, and simple to operate, the Forklift Wrecker is an ideal, cost-saving tool for any garage or vehicle storage lot needing to move inoperable or compromised vehicles on a regular basis. Eliminate expensive wrecker fees, and get more work done, in less time.

We hope this step-by-step guide helps you easily install and use your mechanical auto-load Forklift Wrecker wheel lift attachment by Minute Man Wheel lifts. If you have any more questions about using Forklift Wrecker for your forklift, get in touch with our team at 877-593-6959.



**ARE YOU READY TO SIMPLIFY YOUR
VEHICLE MOVEMENT EFFORTS?**

Forklift Wrecker can help! Call our experts at
(877) 593-6959 to request your a quote!

FORKLIFTWRECKER.COM

Forklift Wrecker can help! Call our experts at
(877) 593-6959 to request your a quote!

FORKLIFTWRECKER.COM

[illegible]